

ISP[®]

International Sound Products

service manual


Radio


Cassette


Recorder


STR 640



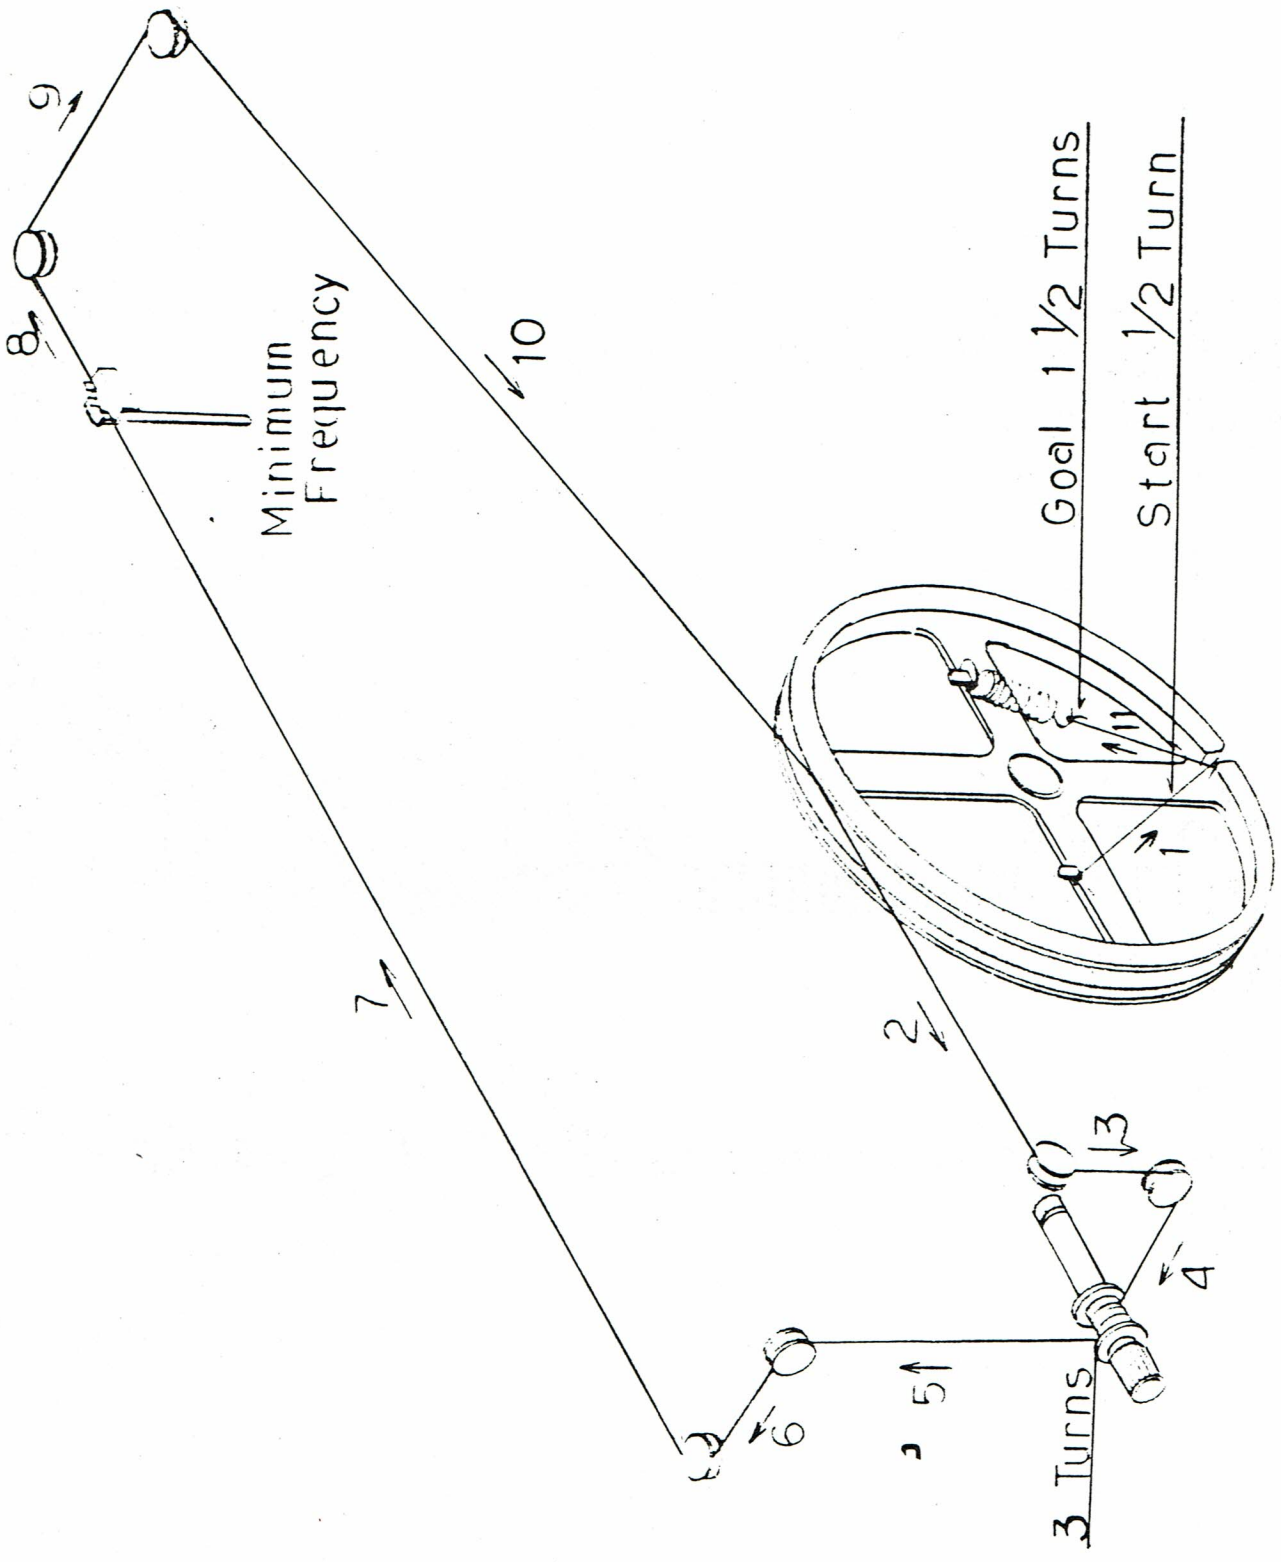


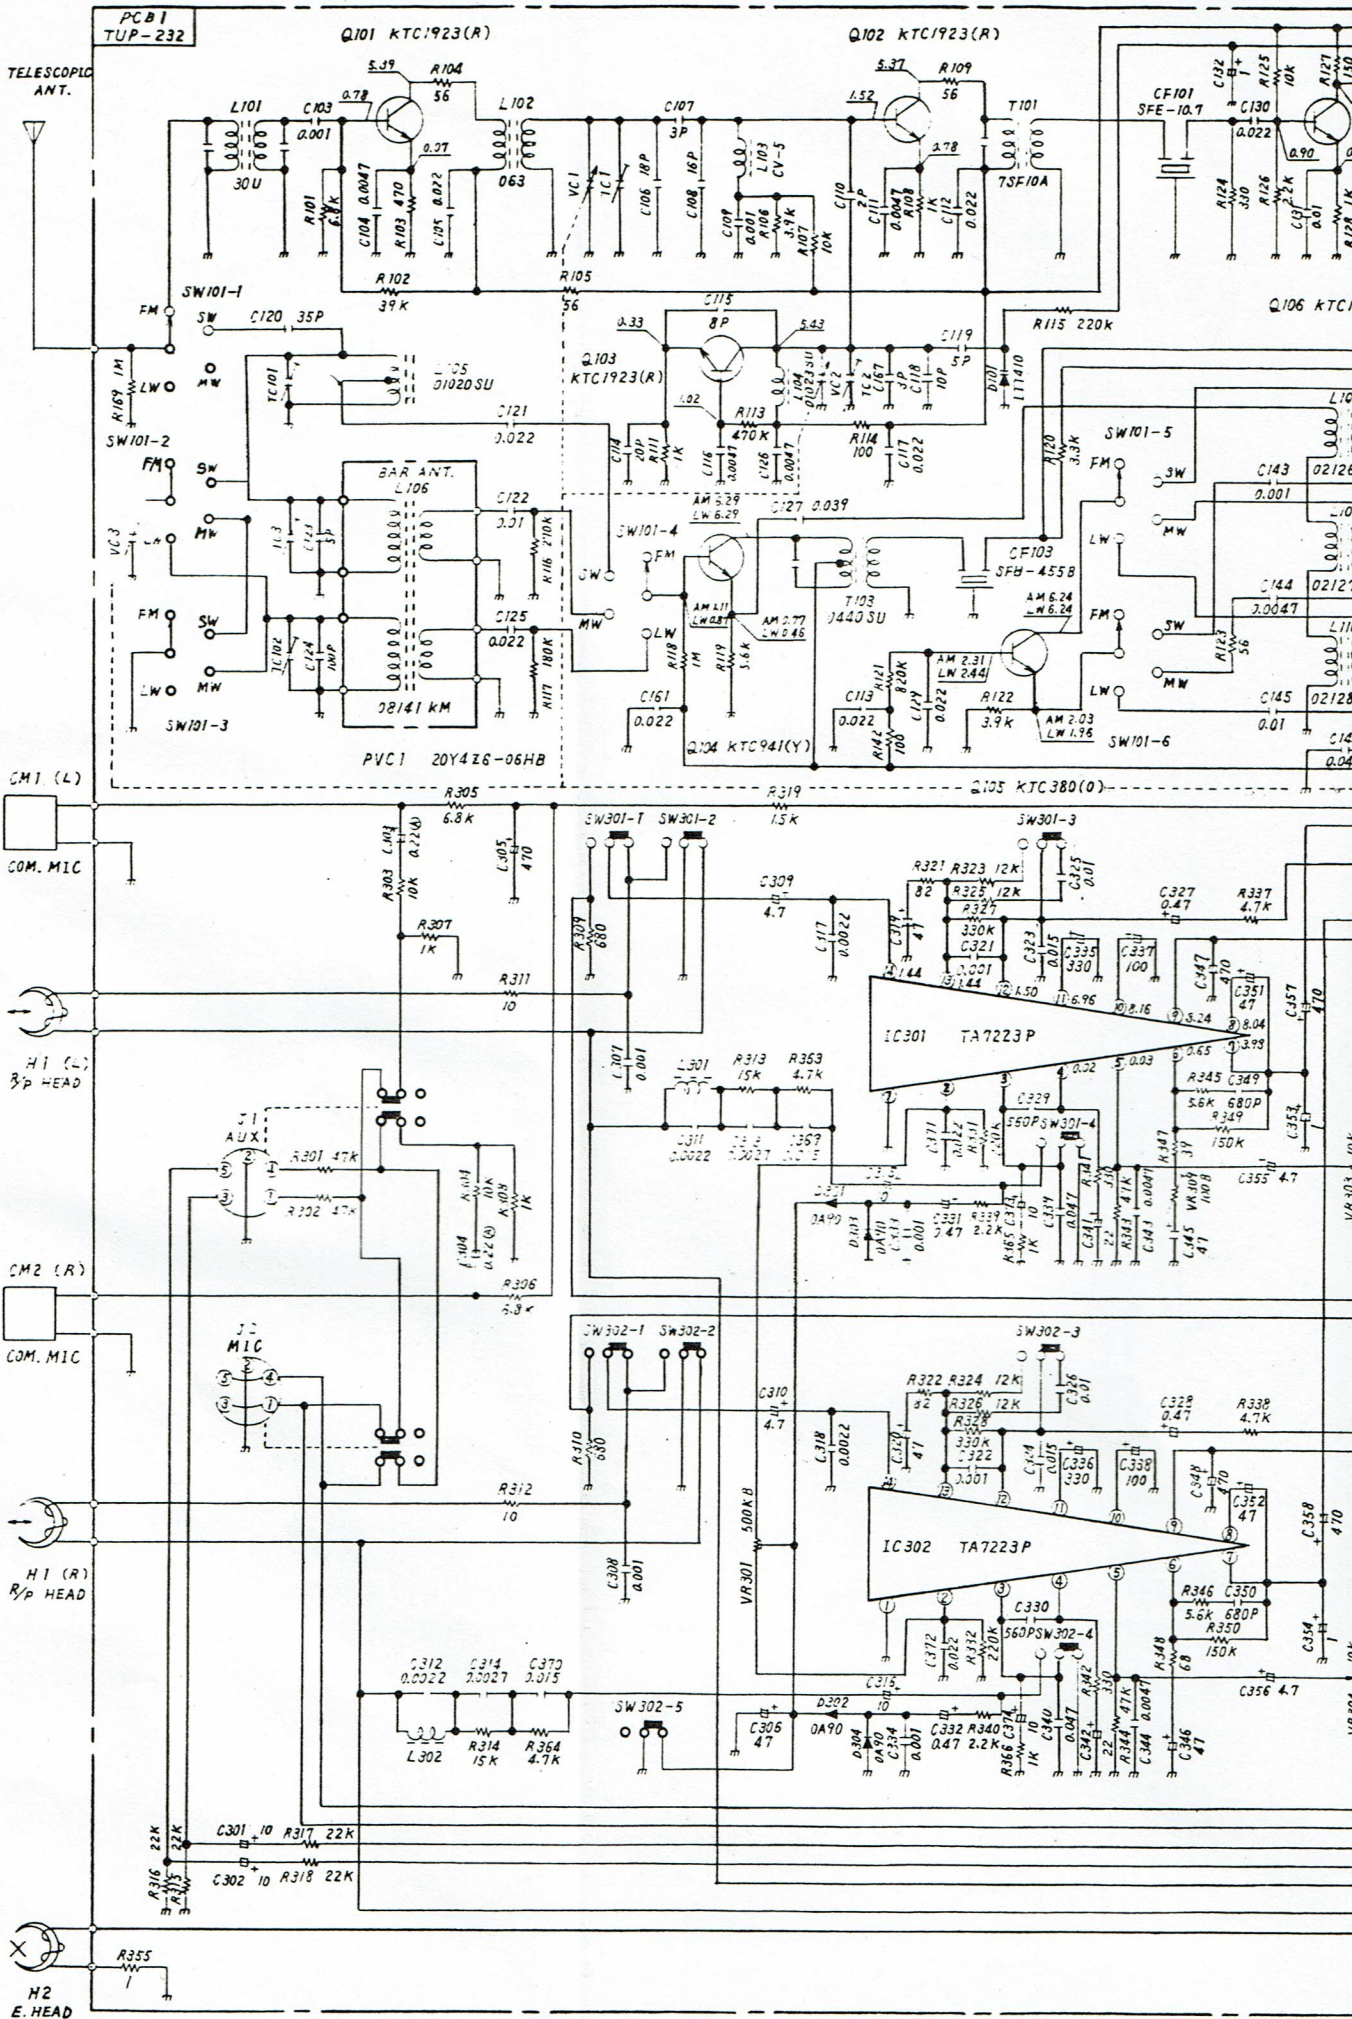

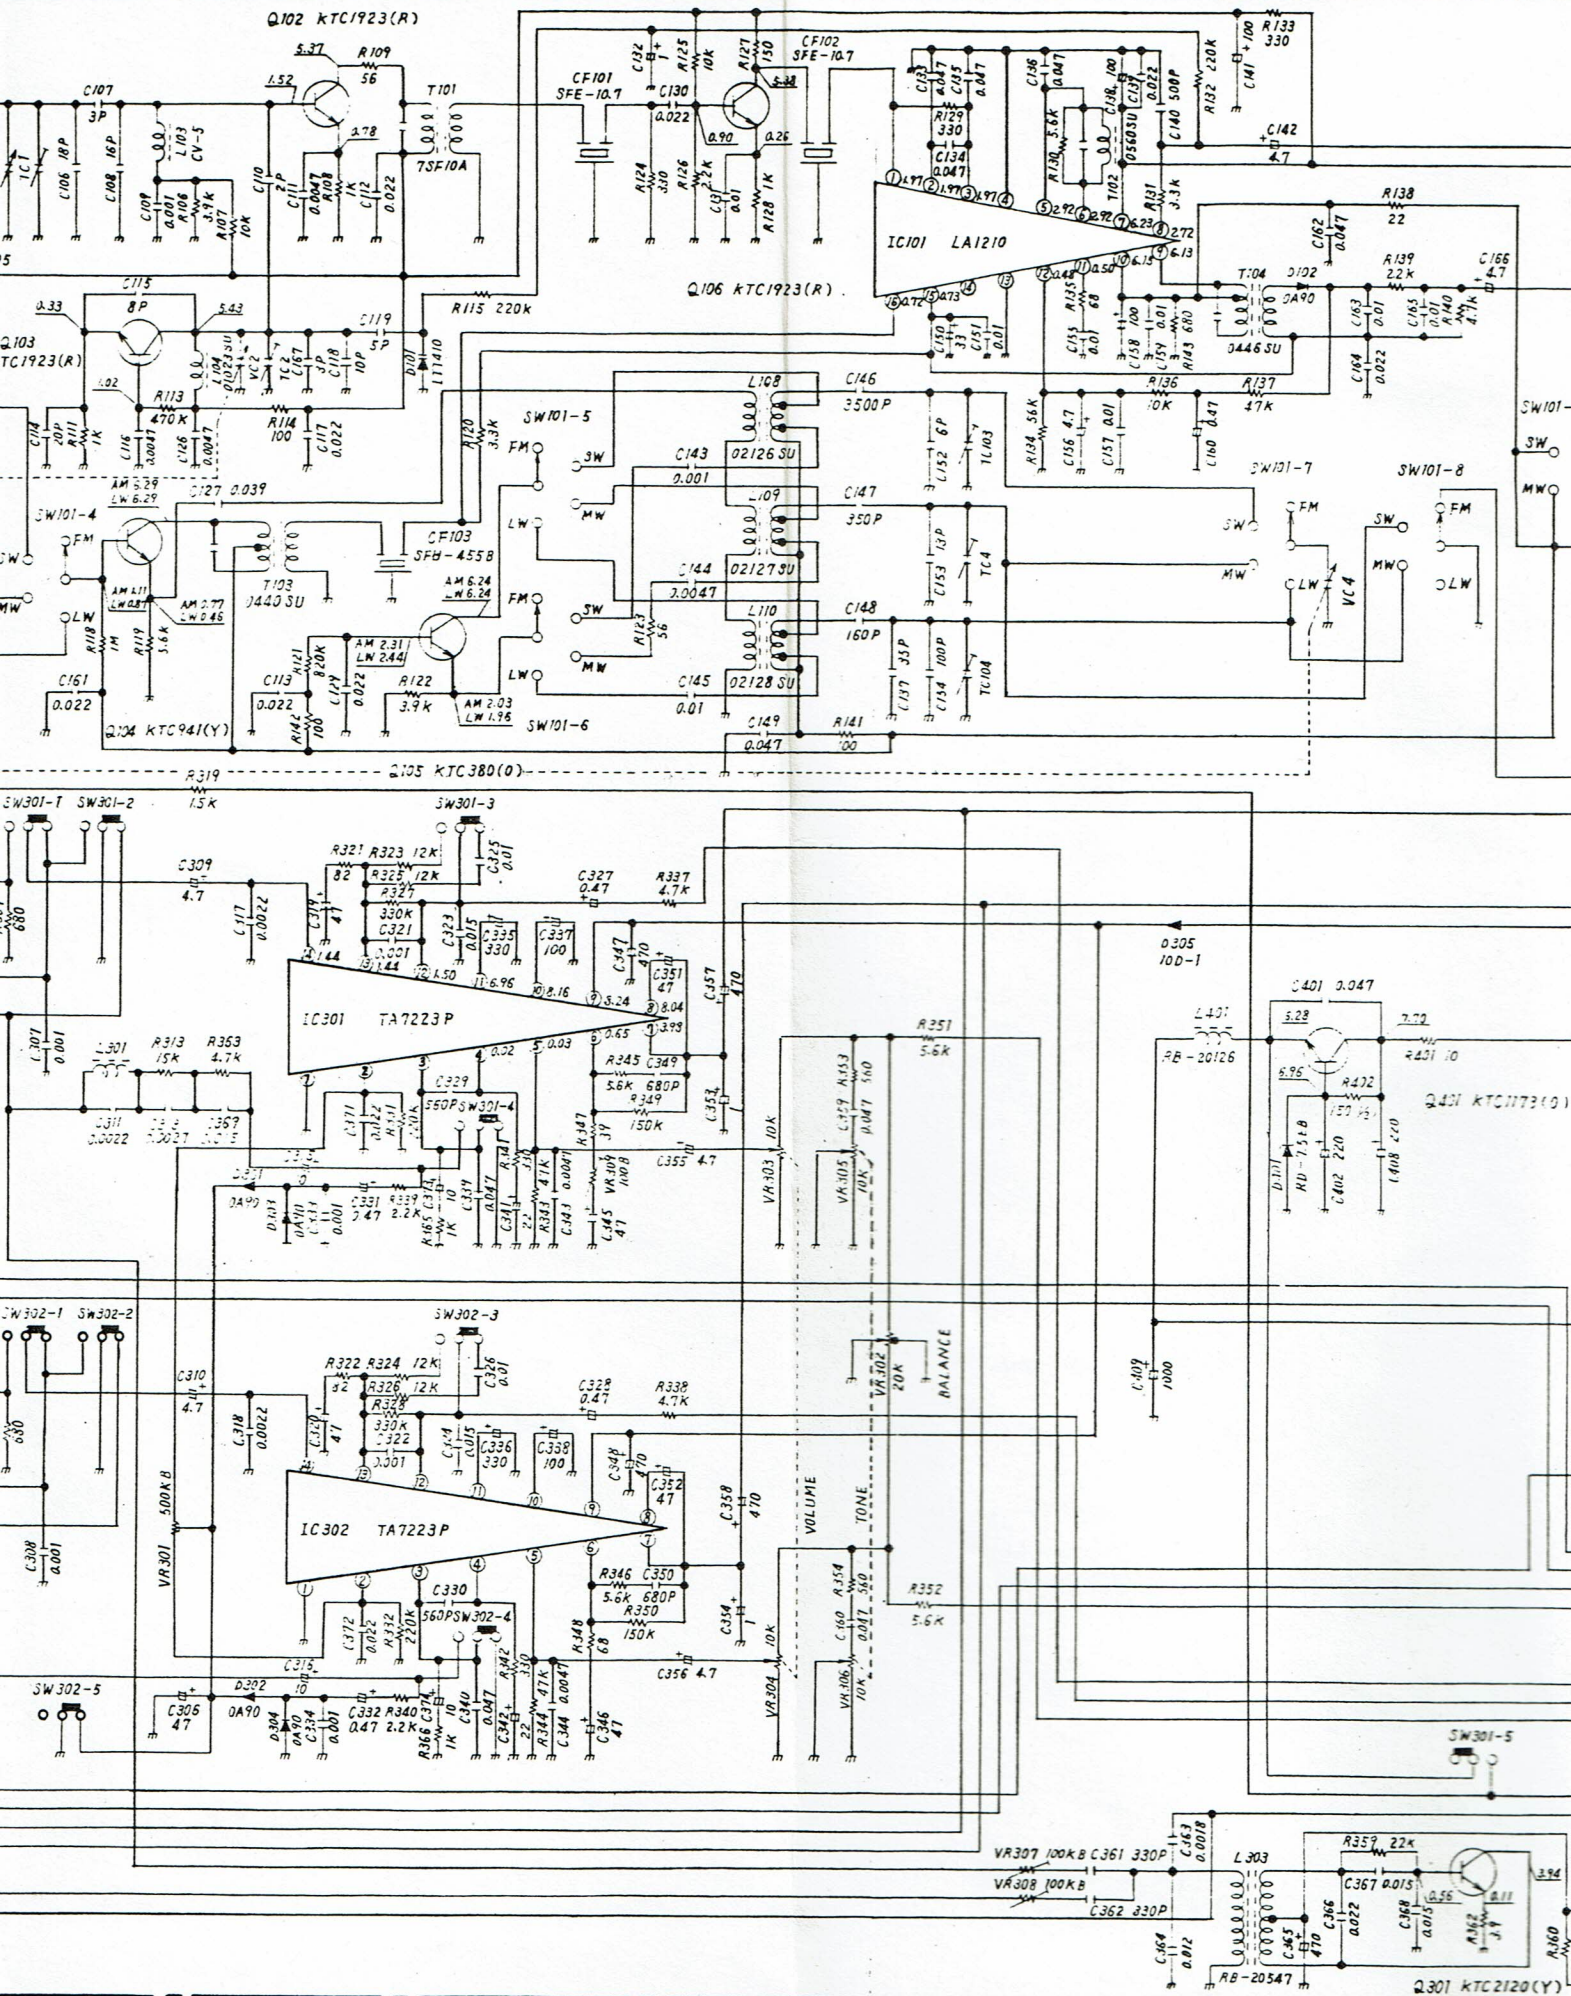

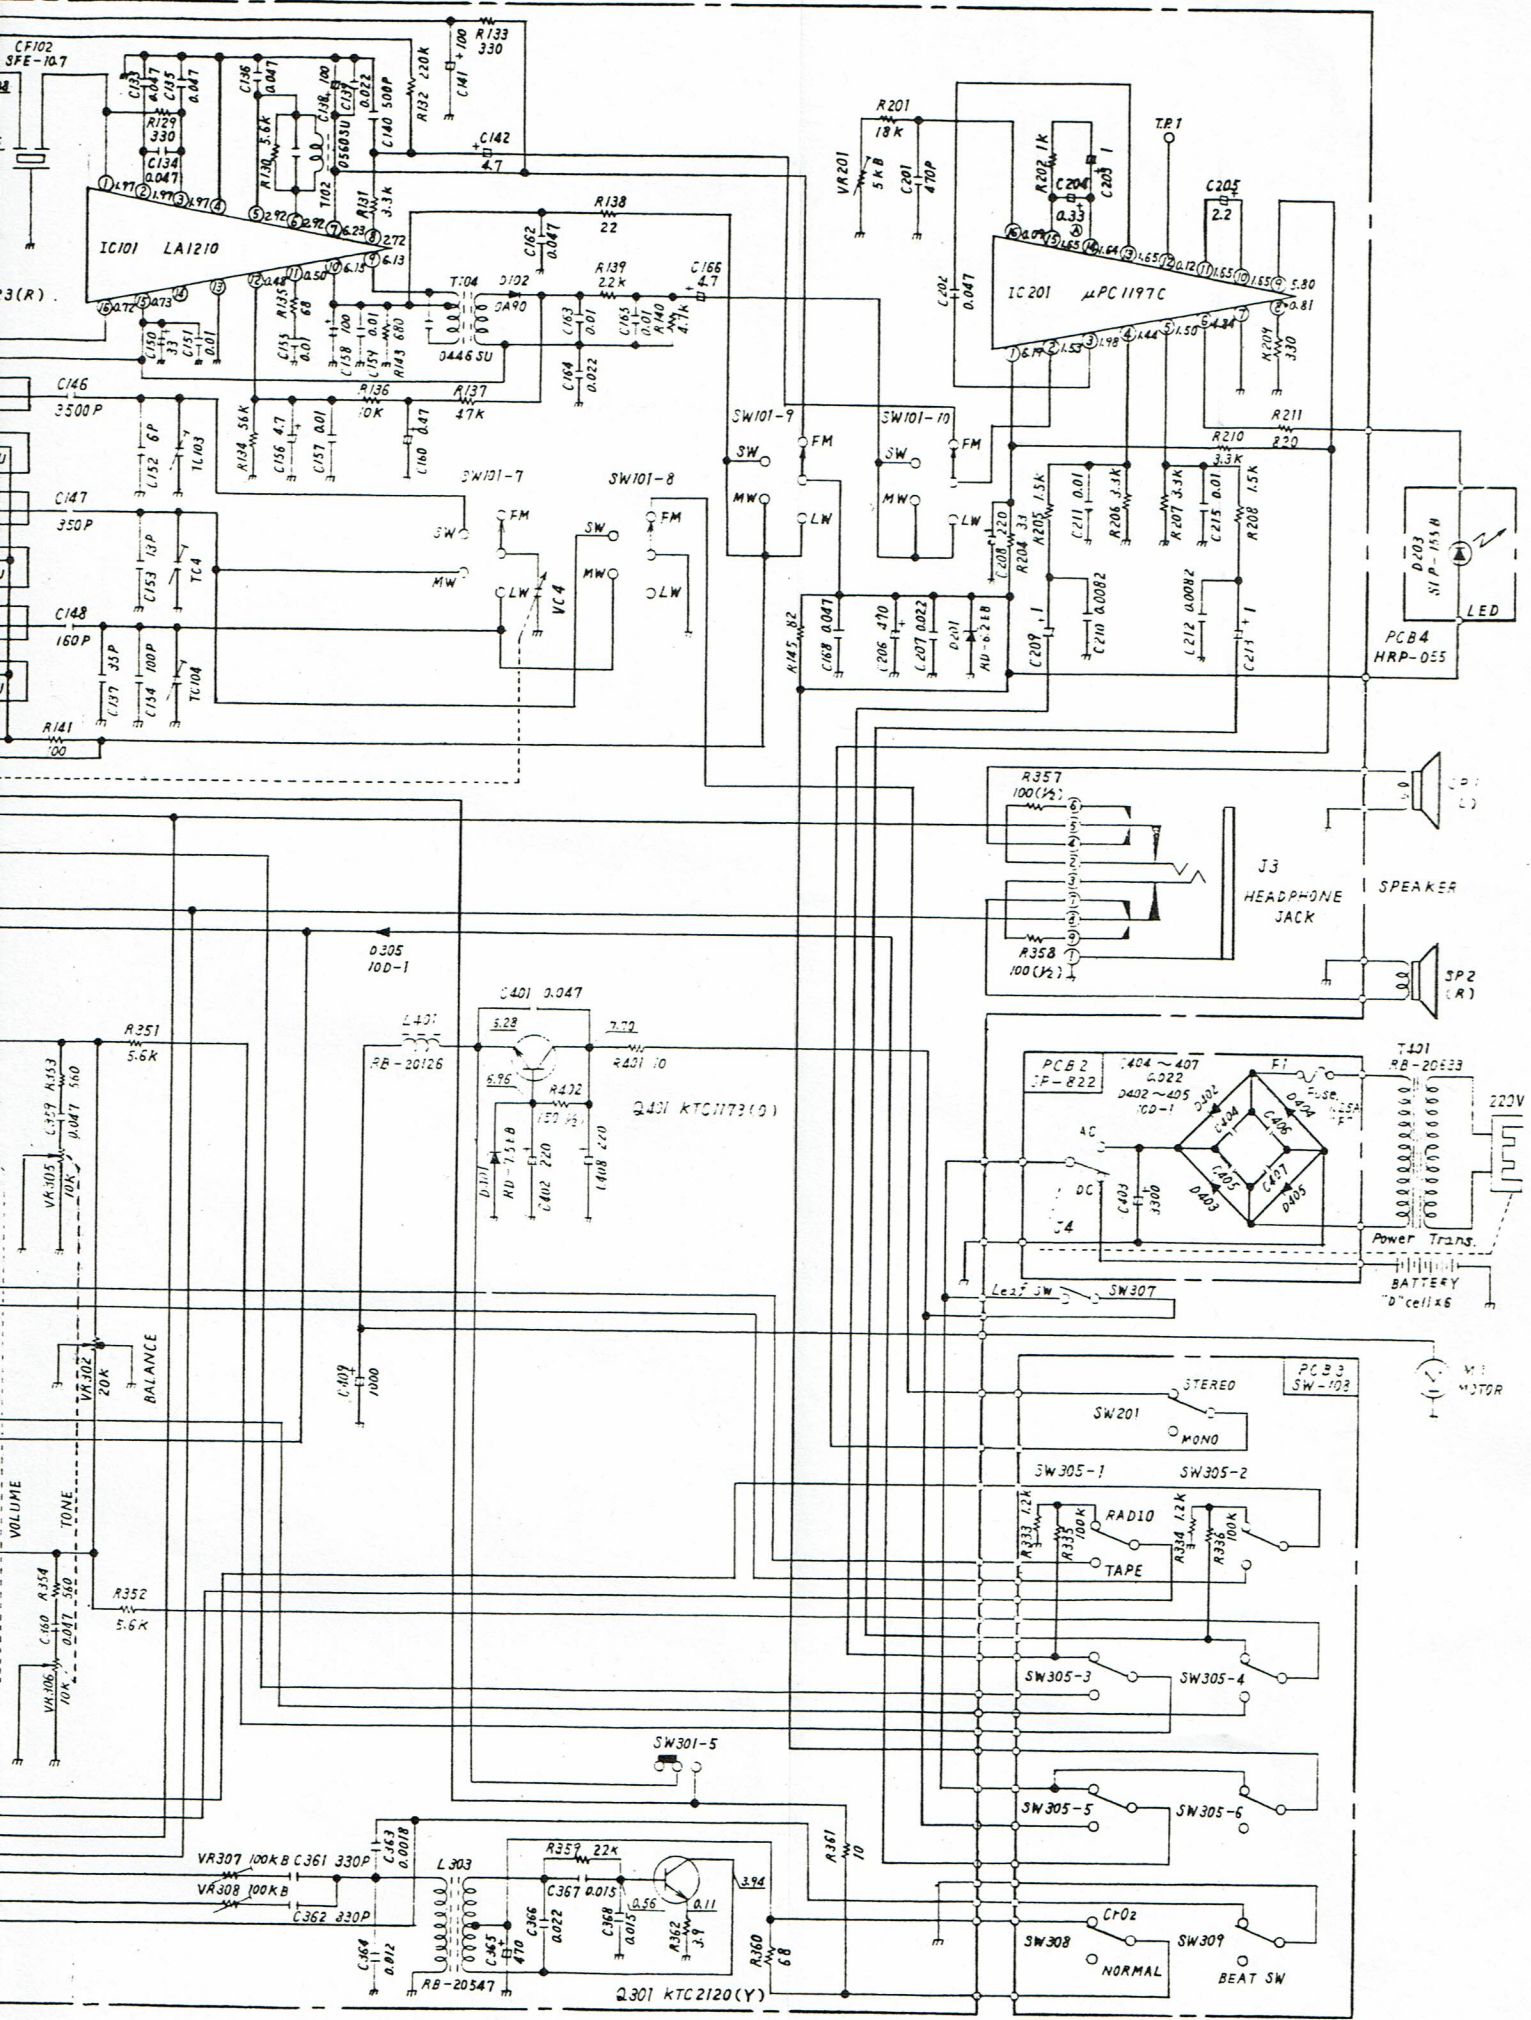


BAR ANT.

 

SW305 SW201
-6


PCB4
HRP-055
BOTTOM VIEW

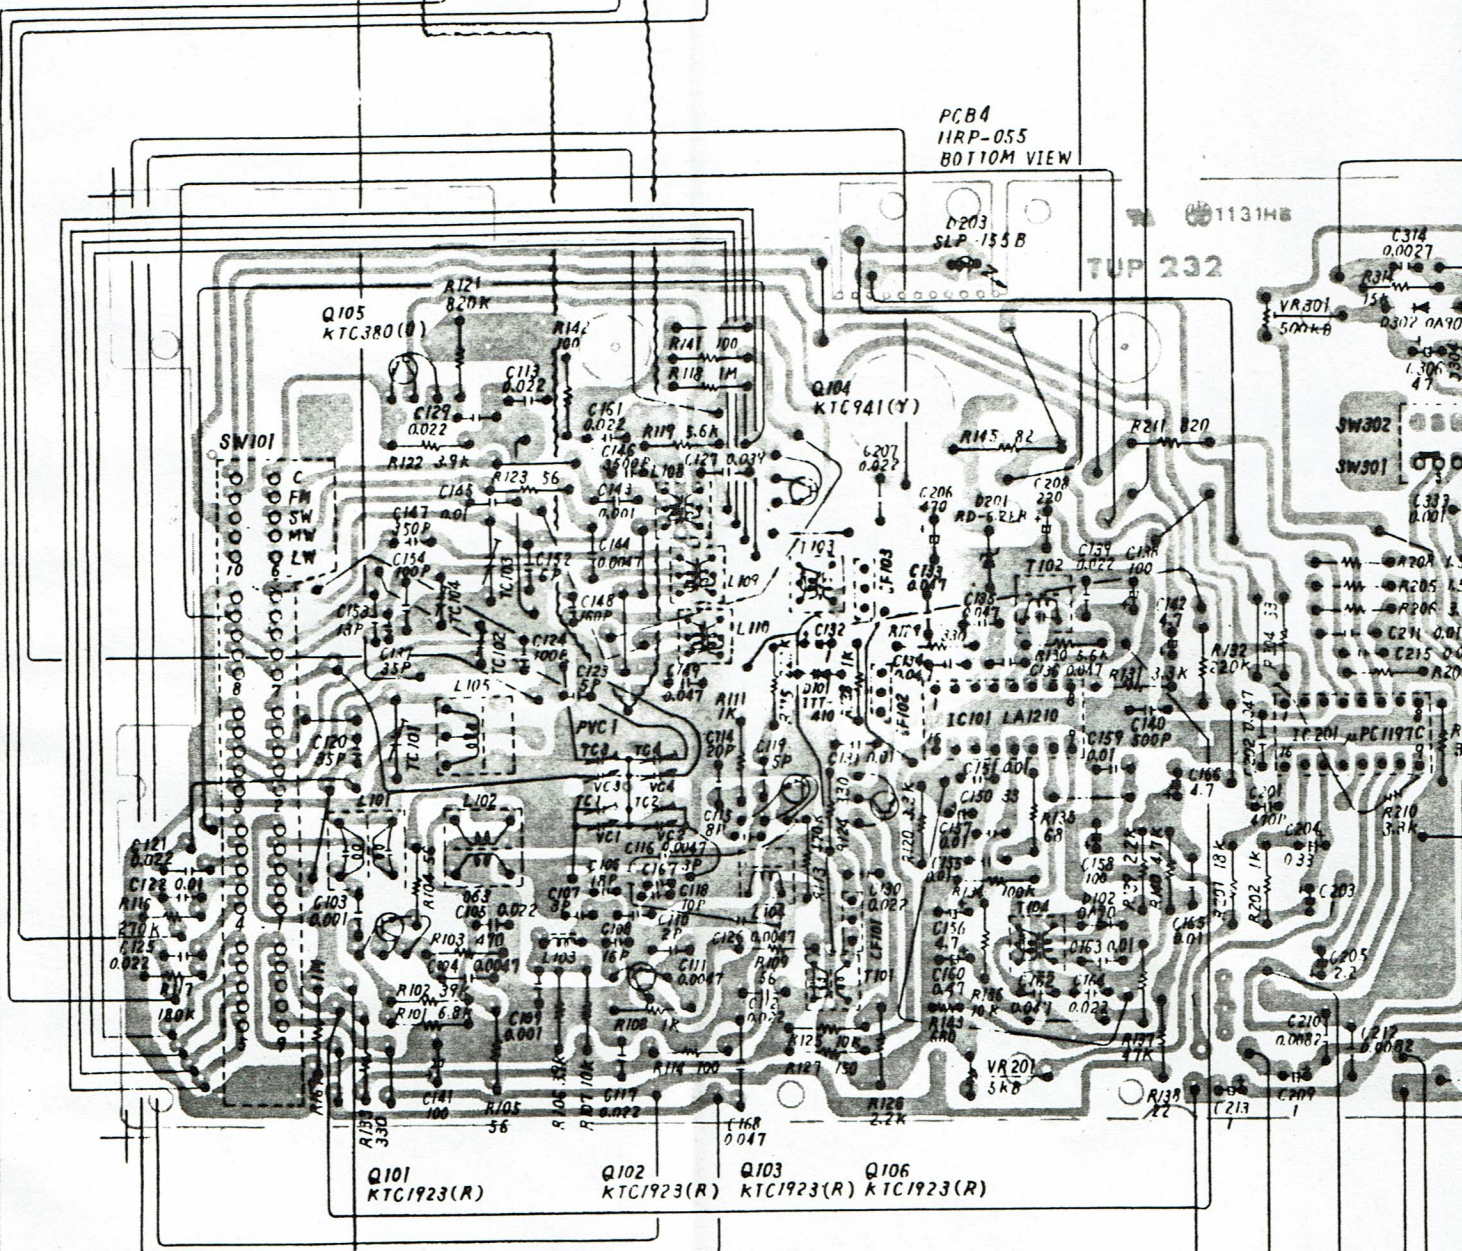

PCB1
TUP-232
BOTTOM VIEW

TELESCOPIC
ANT.

SW4305 SW305 SW201 SW308
-4 -3

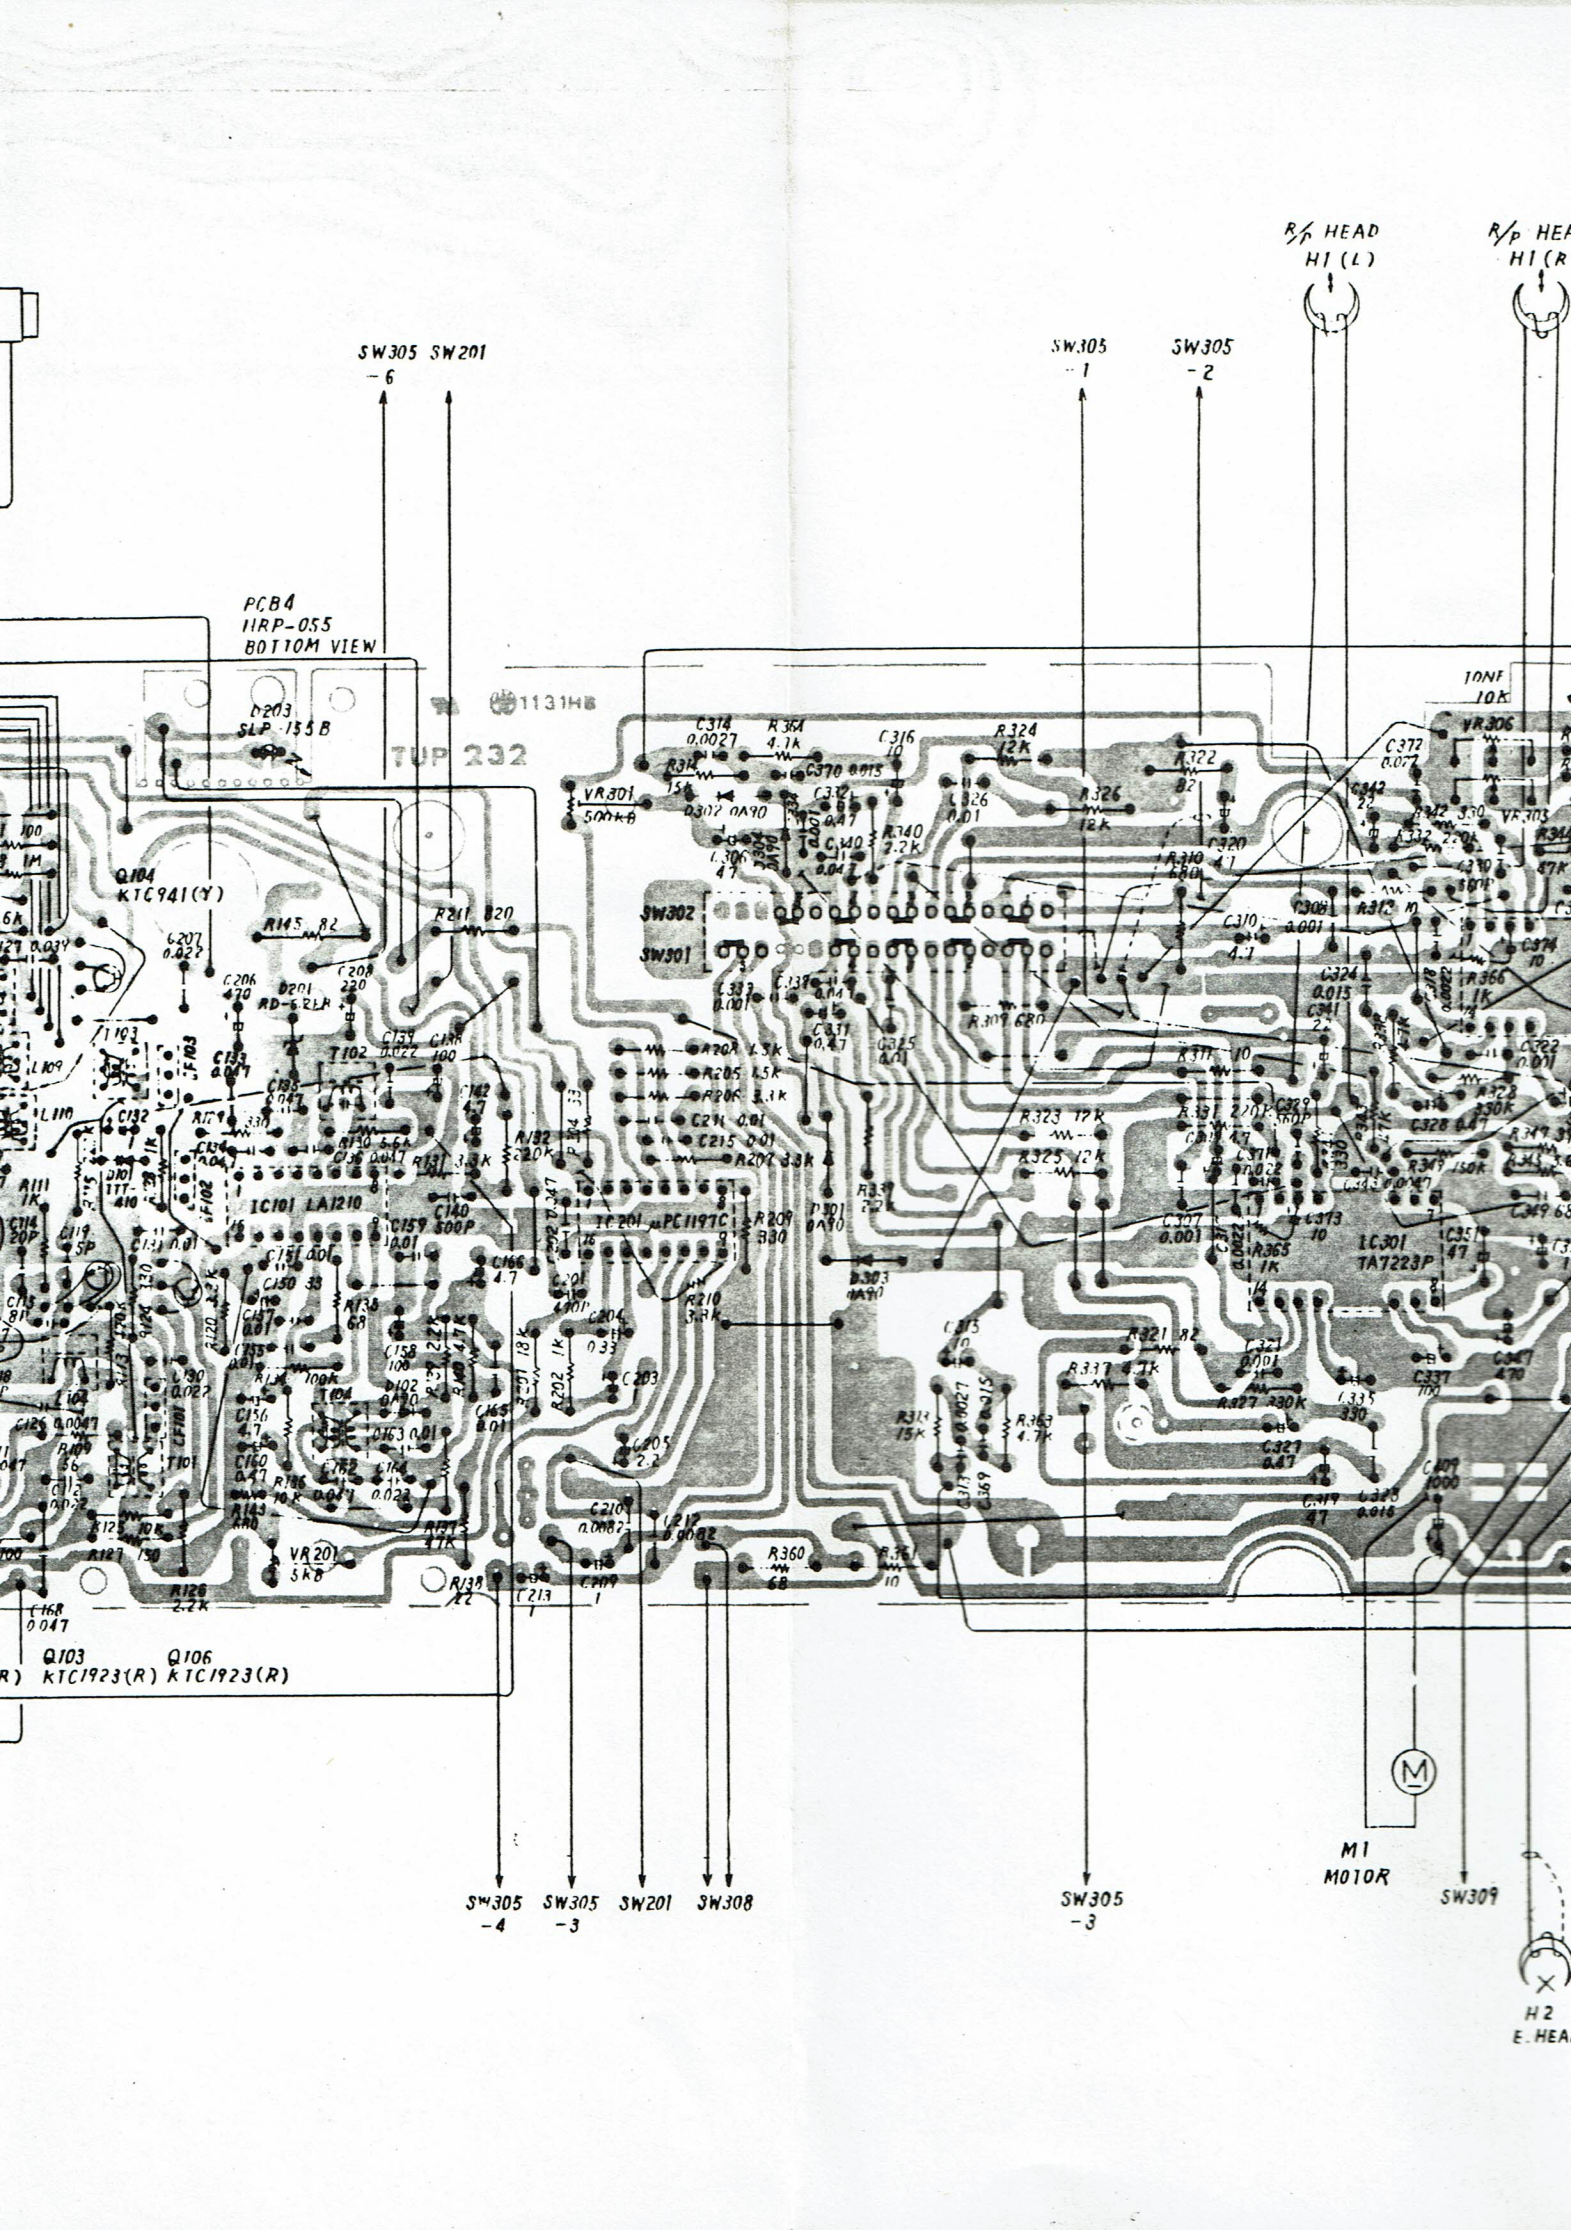

PCB4
HRP-055
BOTTOM VIEW

SW305 SW201
-6

SW305
-1

SW305
-2

R/P HEAD
HI (L)

R/P HEAD
HI (R)

TUP 232

Q103 Q106
KTC1923(R) KTC1923(R)


SW305 SW305 SW201 SW308
-4 -3

SW305
-3



M1
MOTOR

SW309

H2
E. HEA

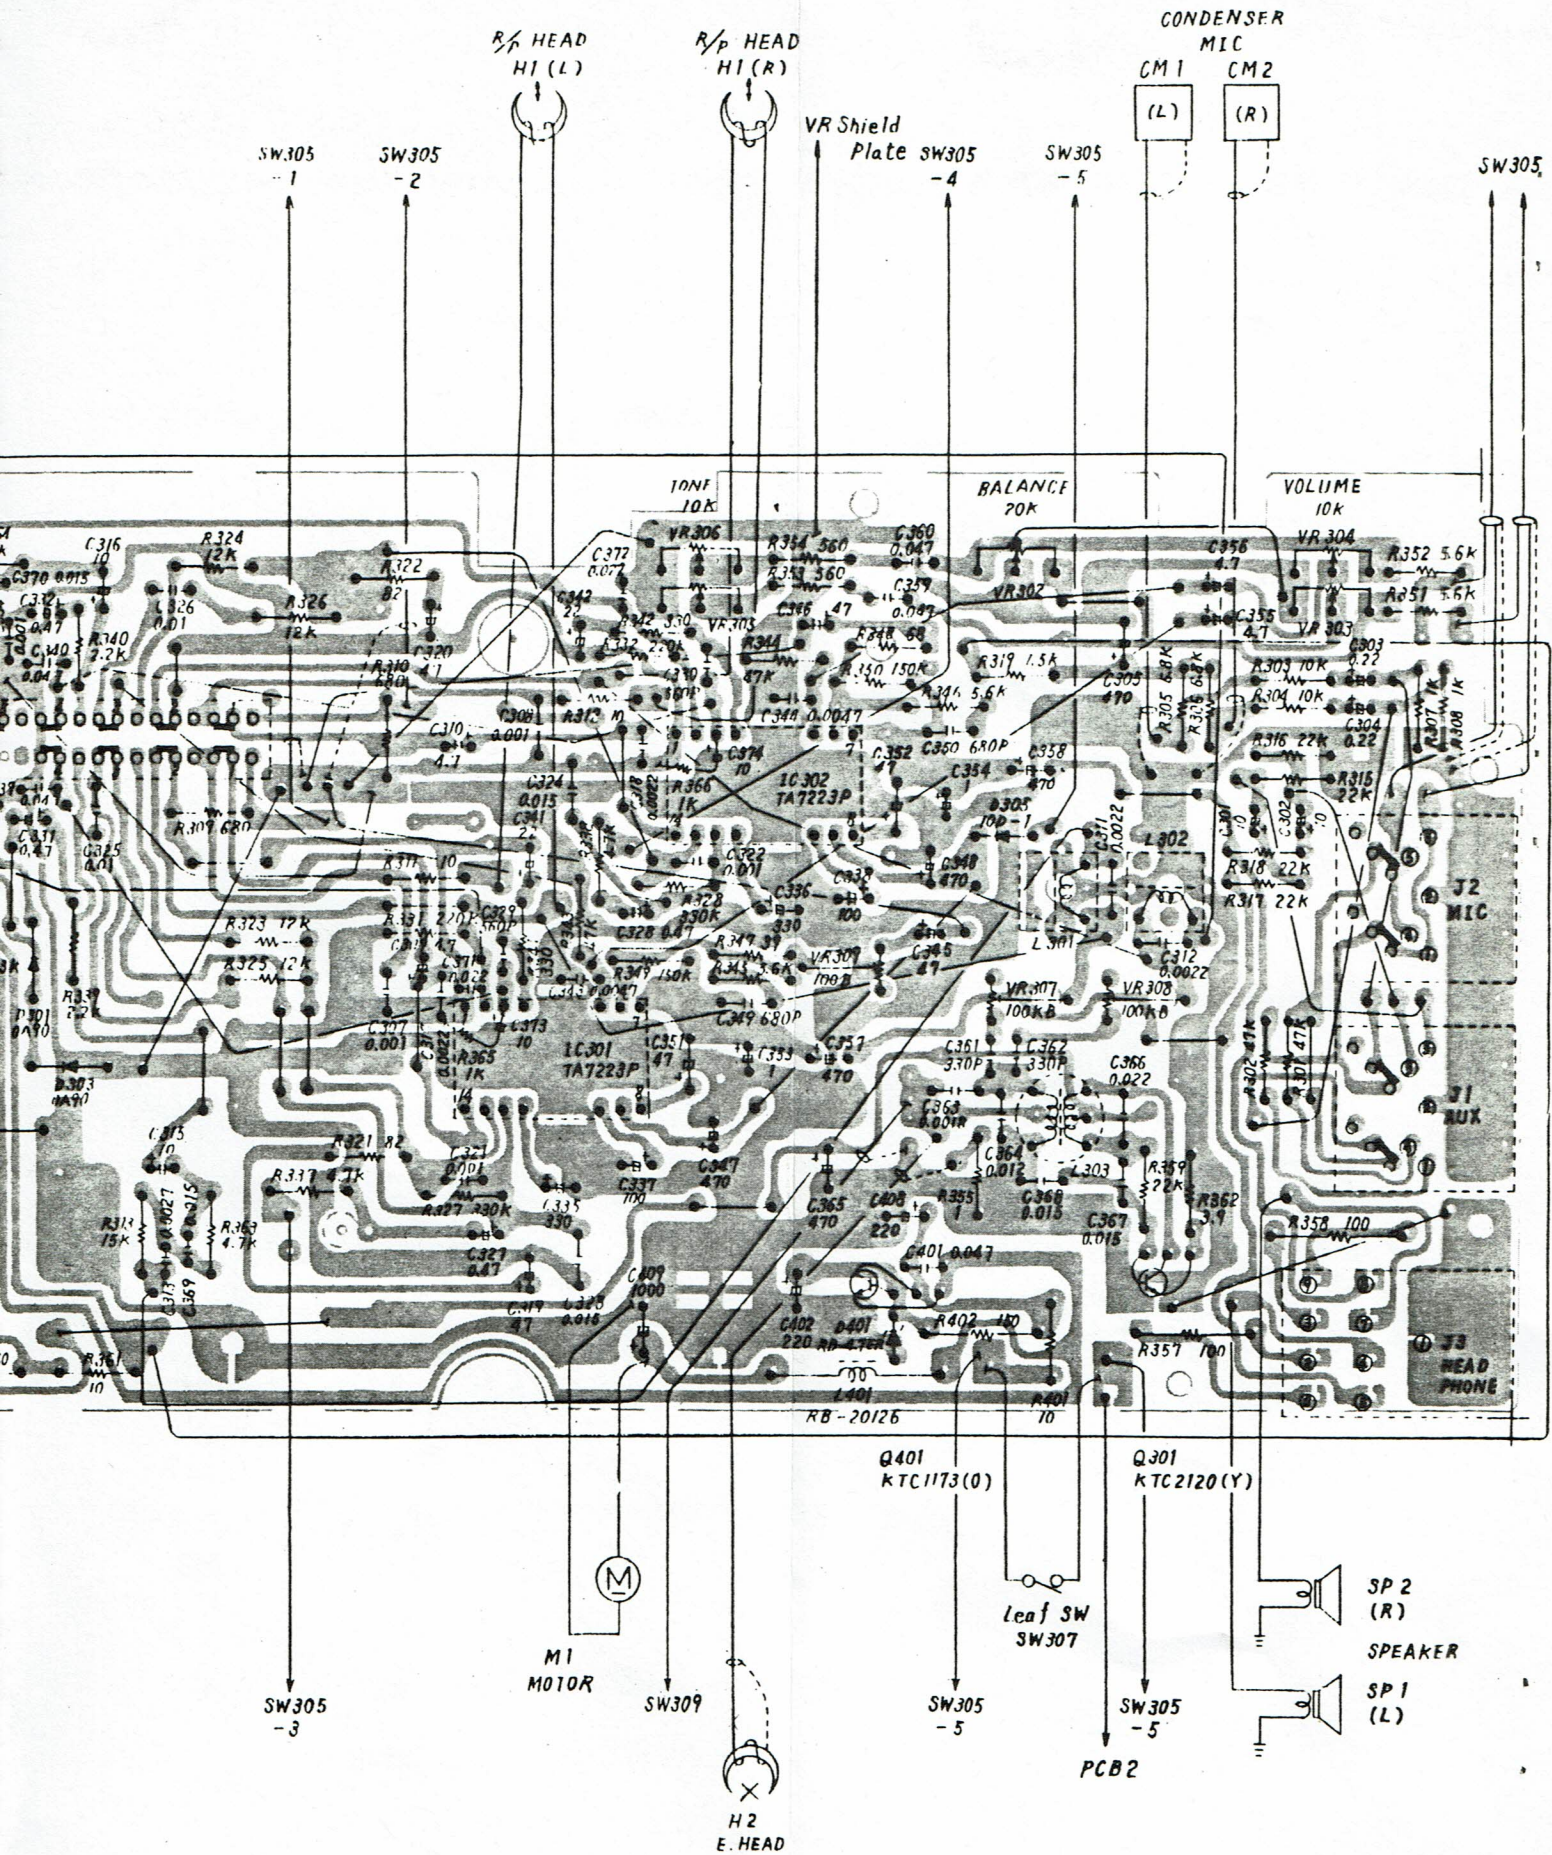

PCB 2
 OP-822
 BOTTOM VIEW

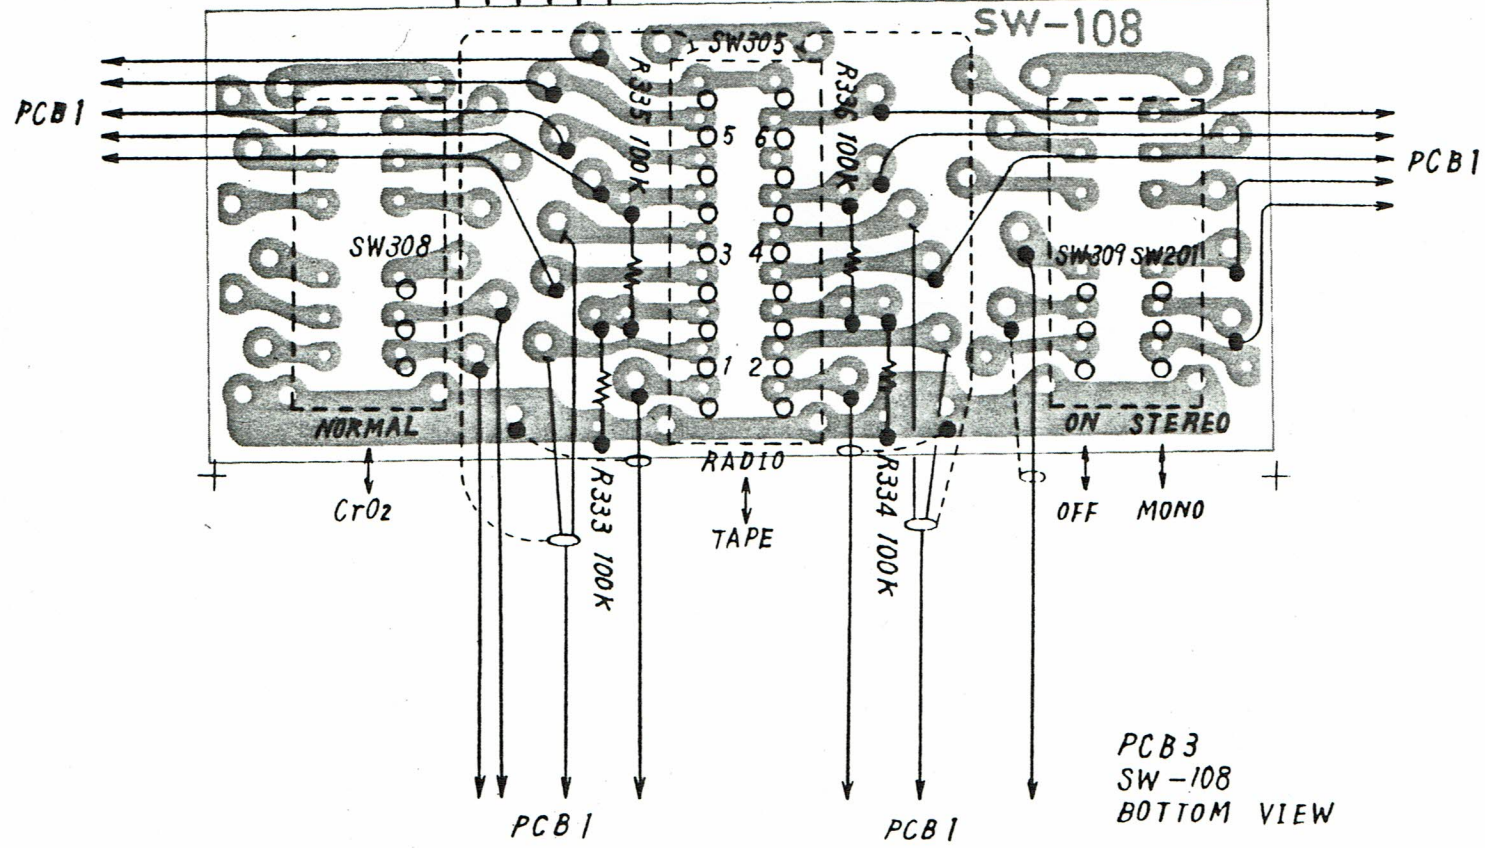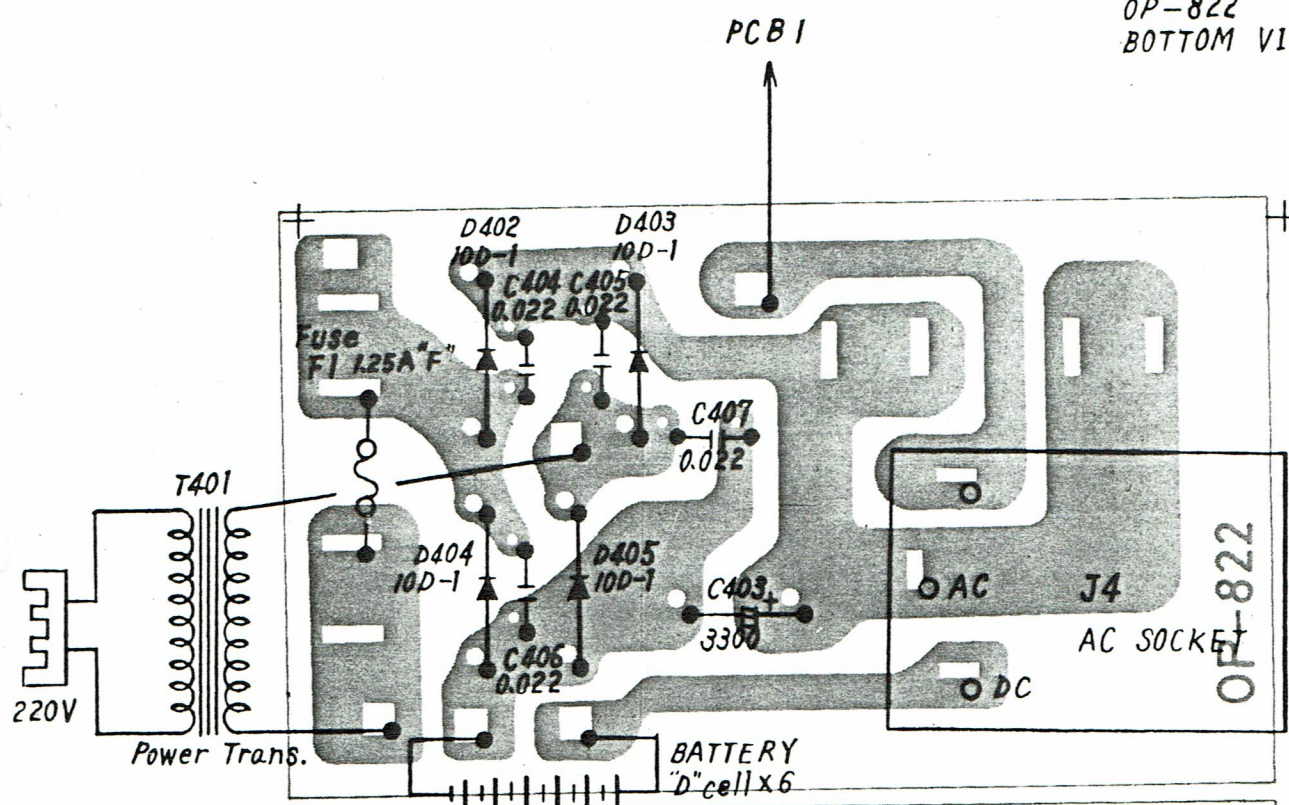

PCB 3
 SW-108
 BOTTOM VIEW