



CIRCUIT DIAGRAM

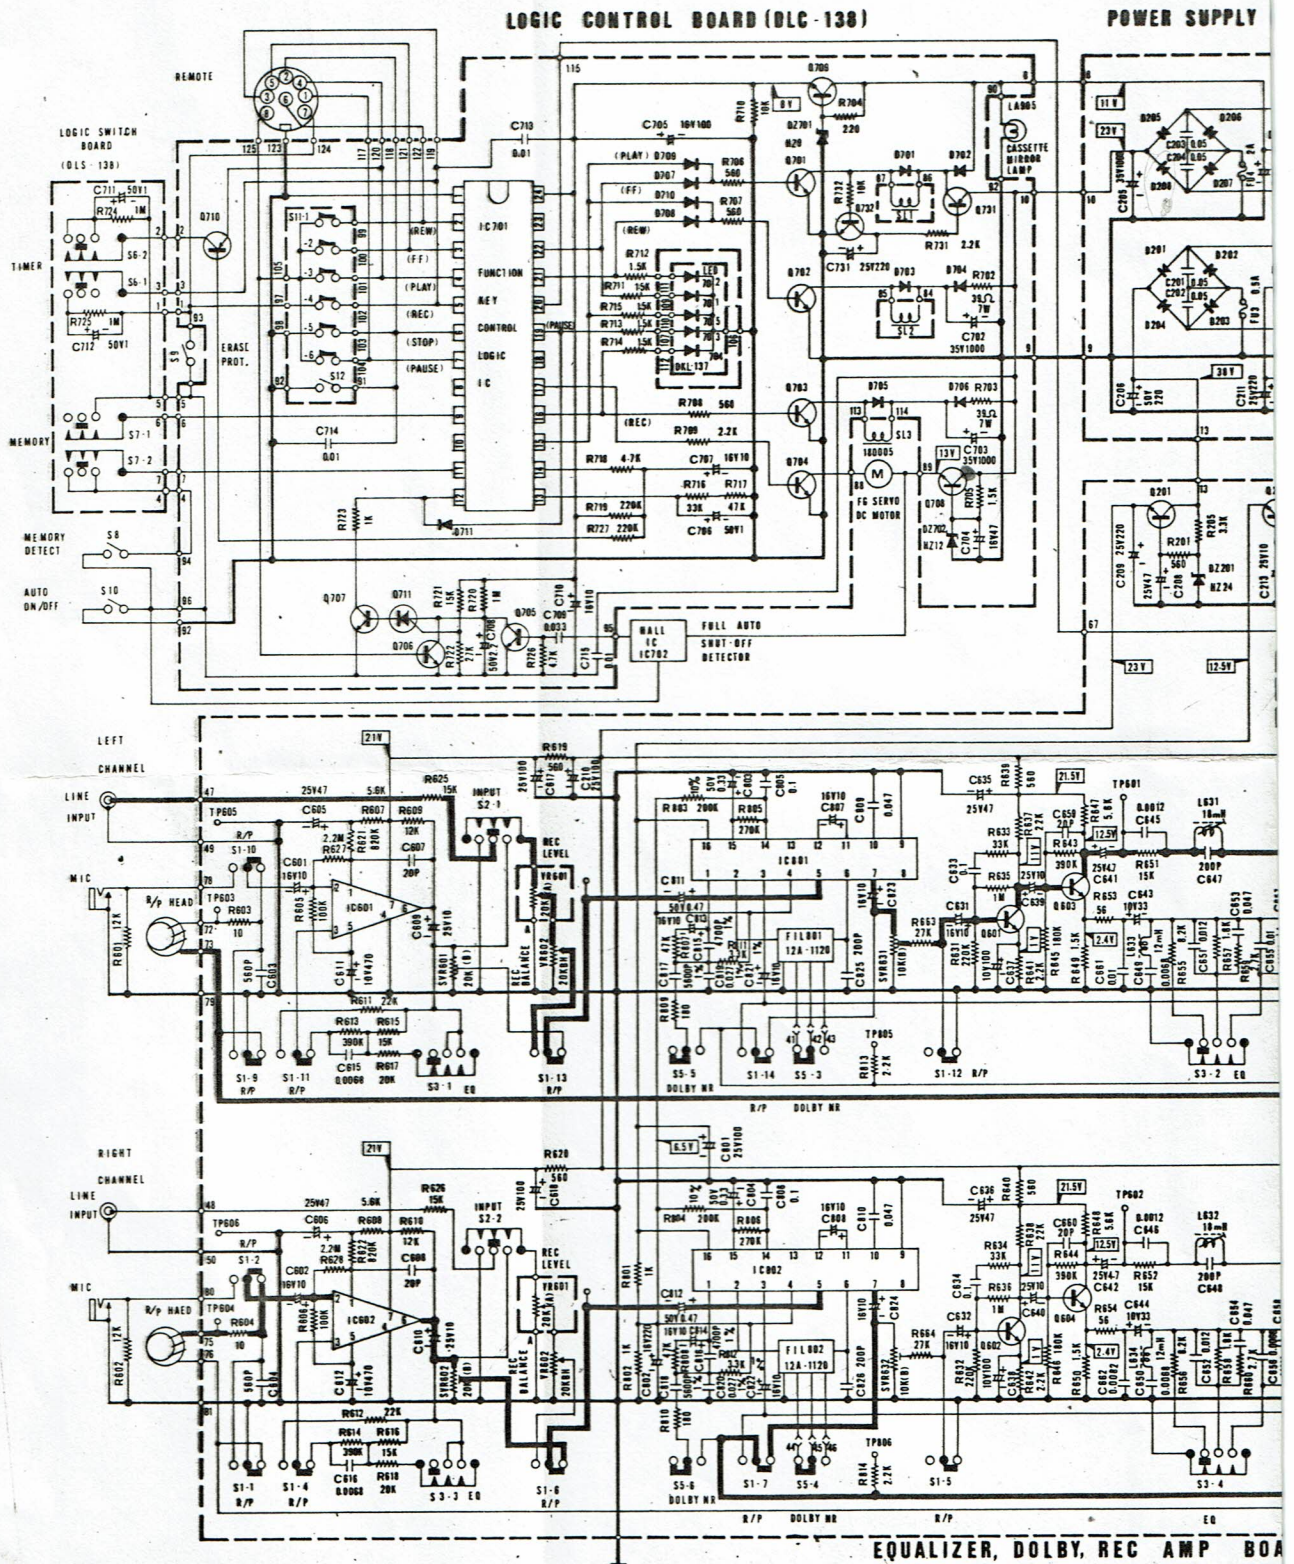

IC CONTROL BOARD (DLC-138)

POWER SUPPLY BOARD (DPS-140)

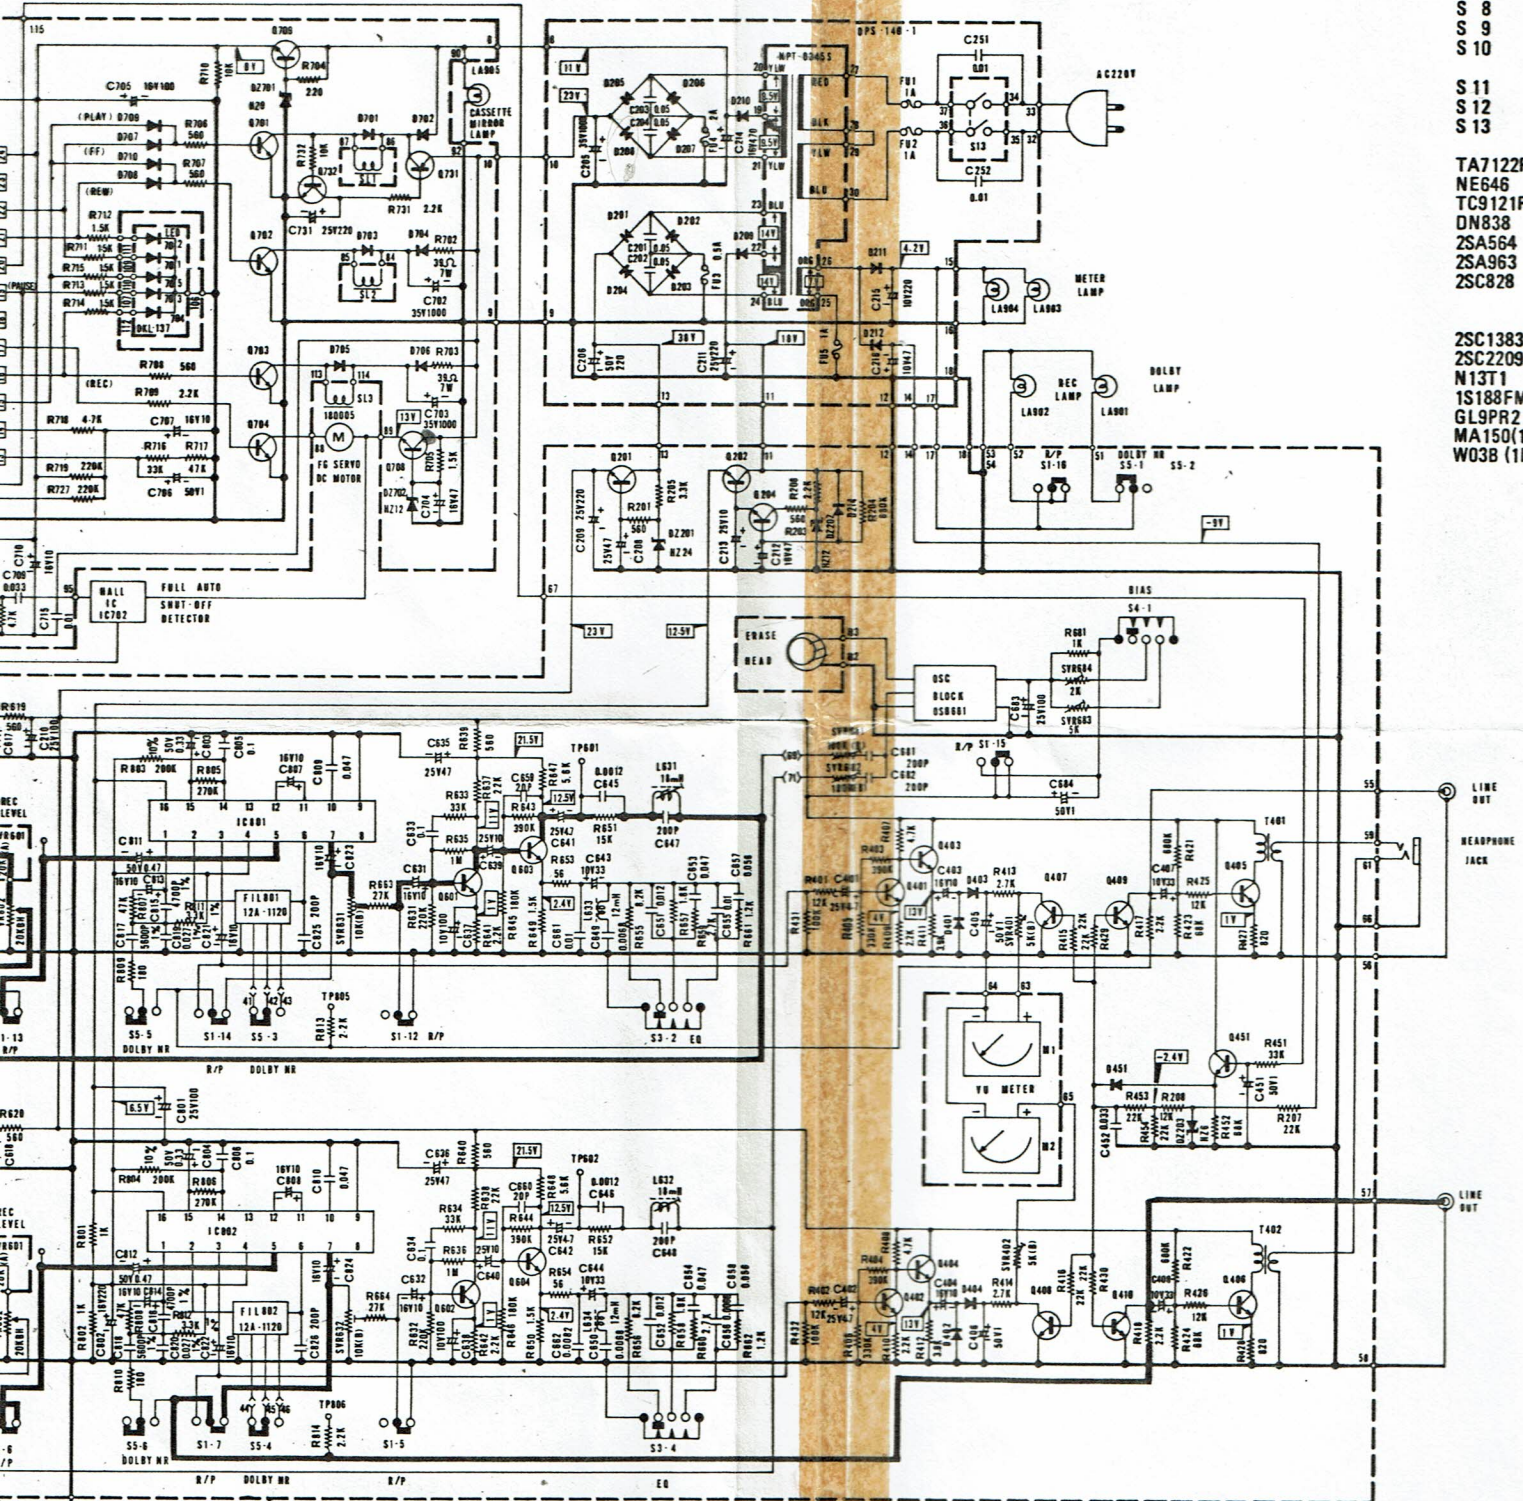

EQUALIZER, DOLBY, REC AMP BOARD (DAM-139)


- S 1 REC
- S 2 INPUT
- S 3 EQ
- S 4 BIAS
- S 5 DOLBY
- S 6 TIME
- S 7 MEM
- S 8 ERASE
- S 9 AUT
- S 10

- S 11 FUN
- S 12 EJECT
- S 13 POWER

- TA7122P
- NE646
- TC9121P
- DN838
- ZSA564
- ZSA963
- ZSC828

- ZSC1383
- ZSC2209
- N13T1
- 1S188FM
- GL9PR2
- MA150(1S155)
- W03B (1N4002)



BOARD (OPS-140)

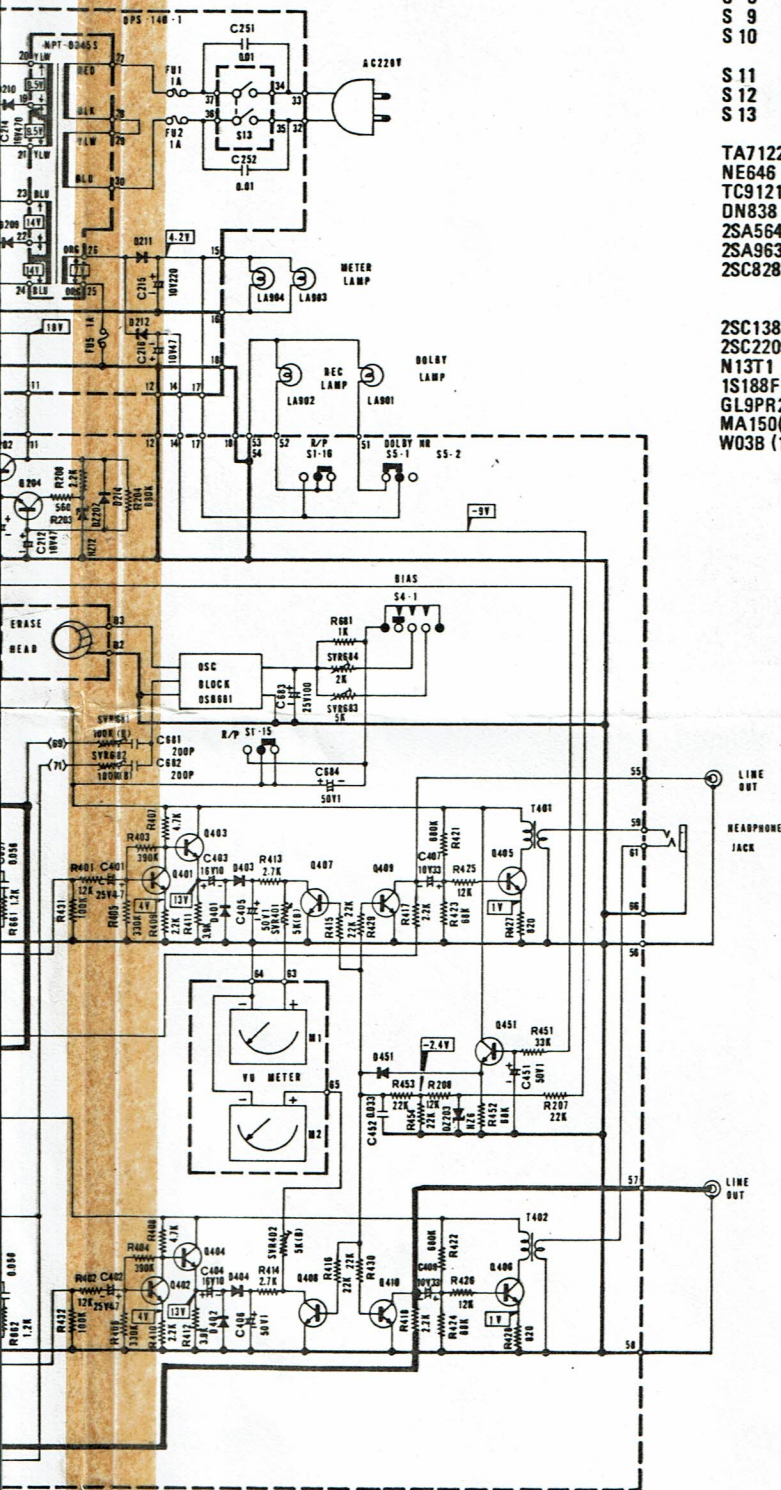

- S 1 REC/PLAY SWITCH (PLAY)
- S 2 INPUT SELECT SWITCH (LINE)
- S 3 EQ SELECT SWITCH (NORMAL)
- S 4 BIAS SELECT SWITCH (NORMAL)
- S 5 DOLBY NR SWITCH (ON)
- S 6 TIMER SWITCH REC/PLAY (OFF)
- S 7 MEMORY FUNCTION SWITCH (OFF)
- S 8 MEMORY DETECT SWITCH (OFF)
- S 9 ERASURE PTECT SWITCH (OFF)
- S 10 AUTOMATIC ON/OFF SWITCH (OFF)
- WITH CASSETTE
- S 11 FUNCTION KEY SWITCH (OFF)
- S 12 EJECT SWITCH (OFF)
- S 13 POWER SWITCH (OFF)

- TA7122P IC 601 602
- NE646 IC 801 802
- TC9121P IC 701
- DN838 IC 702
- ZSA564 Q 710
- ZSA963 Q 731
- ZSC828 Q 204, 601, 602, 603, 604, 401, 402, 403, 404, 405, 406, 407, 408, 409, 410, 411, 705, 706, 707, 732, 202, 704, 708, 709, - 00135-
- ZSC1383 Q 201, 702, 703,
- ZSC2209 Q 711
- N13T1 D 401, 402, 403, 404,
- IS188FM LED 701, 702, 703, 704, 705,
- GL9PR2 LED 451, 707, 708, 709, 710, 711,
- MA150(1S155) D 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 214, 701, 702, 703, 704, 705, 706,
- W03B (1N4002) D

 TOP VIEW

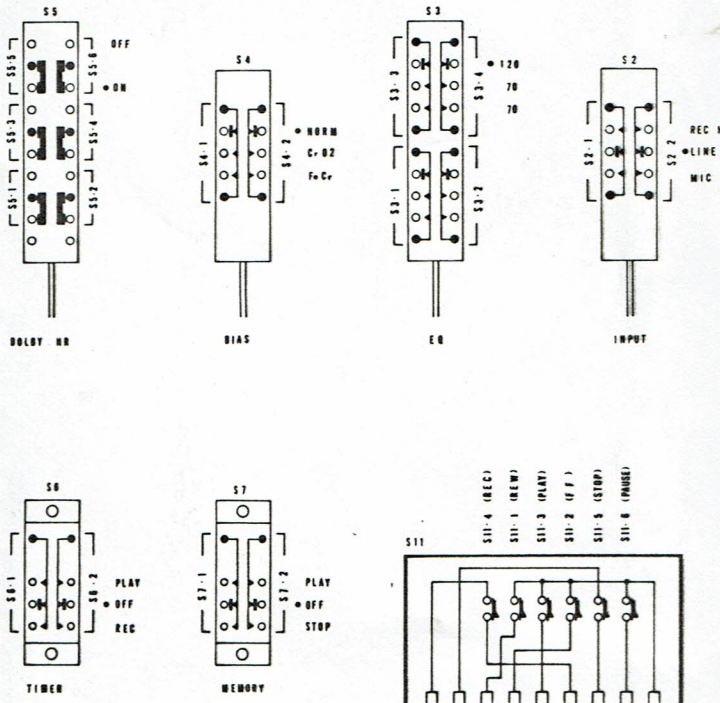

RD (DAM-139)

S3000C-C200
MCD3000
CASSETTE-DECK HI-FI STE